




WET POUR RUBBER REPAIR KITS - COLOUR CHART


PlayKote - Gezolan EPDM 1-4MM



Green #067
[Sage #6021]

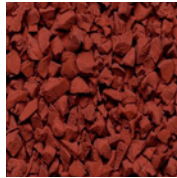


Red #062
[Rust #3016]

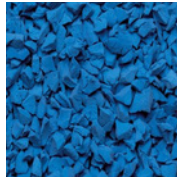

Blue #064
[Ocean #5015]



Yellow #069
[Desert Sand #1002]

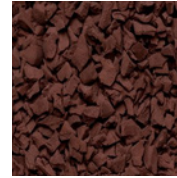

Brown #046
[Chocolate #8025]



Beige #066
[Wheat # 1014]


PlayKote Precoat Range - 2-5mm




Fawn *
#833




Sand *
#816

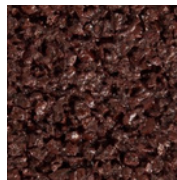


Shiraz
#049

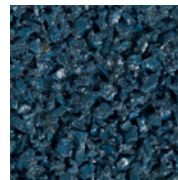


Caribbean
#054

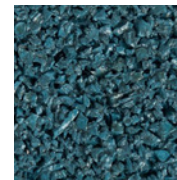


Galaxy
#053

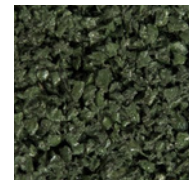

Leaf
#812

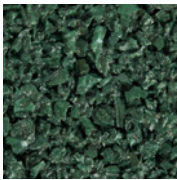

Nature
#051

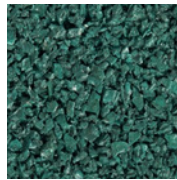

Emerald
#052



Bourbon
#521



Silver #057

PlayKote SBR



8-15mm crumb (Local)
9-12mm crumb (Imported)



2-4mm crumb



4 Mesh Buffings

PHONE **1300 752 956**

sales@australiansurfacing.com.au

www.australiansurfacing.com.au

Offices: **Adelaide, Melbourne, Sydney, Brisbane**